


KALDEWEI

ANTIDRÖHNMATTEN-SET | ANTI-DRONE MATTING SET
SET GELUIDDEMPENDE MATTEN | KIT DE REVÊTEMENTS ANTIBRUIT
SET PLACCHETTE ANTIROMBO | JUEGO DE ALFOMBRILLAS ANTIRRESONANCIA

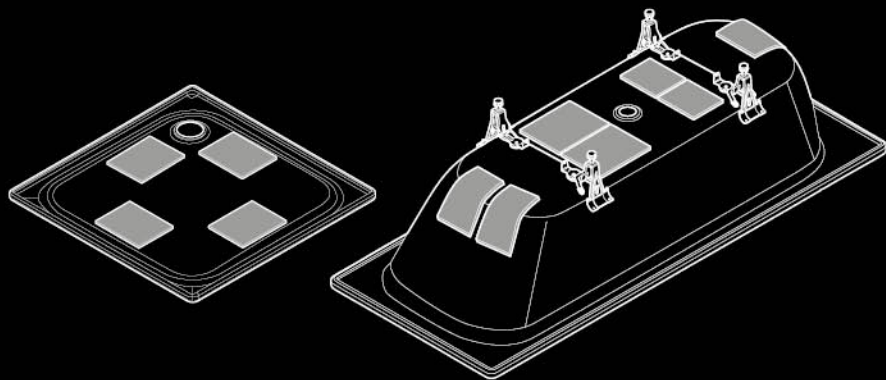


2

DE Montageanleitung | EN Installation instructions


NL Montagehandleiding | FR Instructions de montage | IT Istruzioni di montaggio
ES Instrucciones de montaje | PT Instruções de montagem | DA Monteringsvejledning
NO Monteringsanvisning | SV Monteringsanvisning | FI Asennusohje | ET Paigaldusjuhised
LV Montāžas instrukcija | LT Montavimo instrukcija | PL Instrukcja montażu | CS Návod k montáži
RU Инструкция по монтажу | UK Інструкція з монтажу | SK Návod na montáž | HU Összeszerelési utasítás | RO Instrucțiuni de montare | SL Navodila za montažo | HR Upute za montažu
BG Ръководство за монтаж | EL Οδηγίες συναρμολόγησης | TR Montaj talimatı | AR بيكرتلا لي ليد
ZH 安装说明书 | JA 設置説明書 | KO 조립설명서 | ID Petunjuk perakitan | TH คำแนะนำในการติดตั้ง
VI Hướng dẫn lắp ráp | HI स्थापना निर्देश

1.**2.**


ANTIDRÖHNMATTEN-SET




A


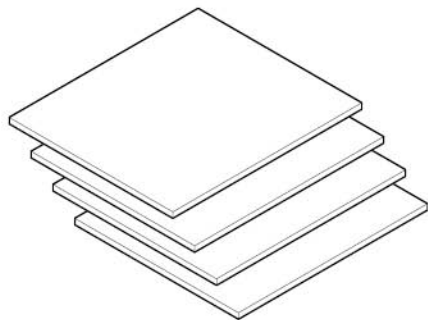







B



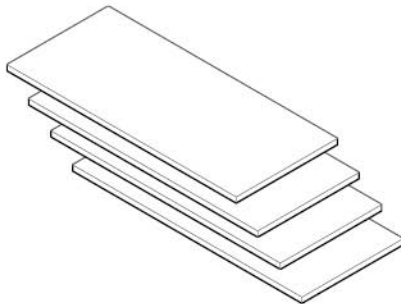






C




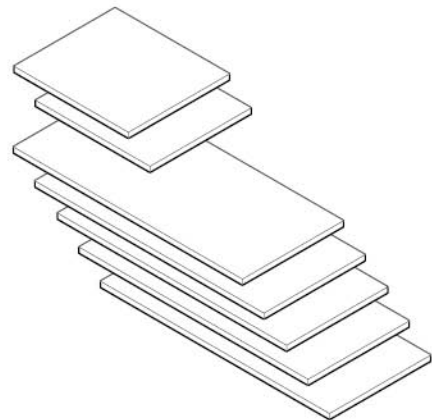





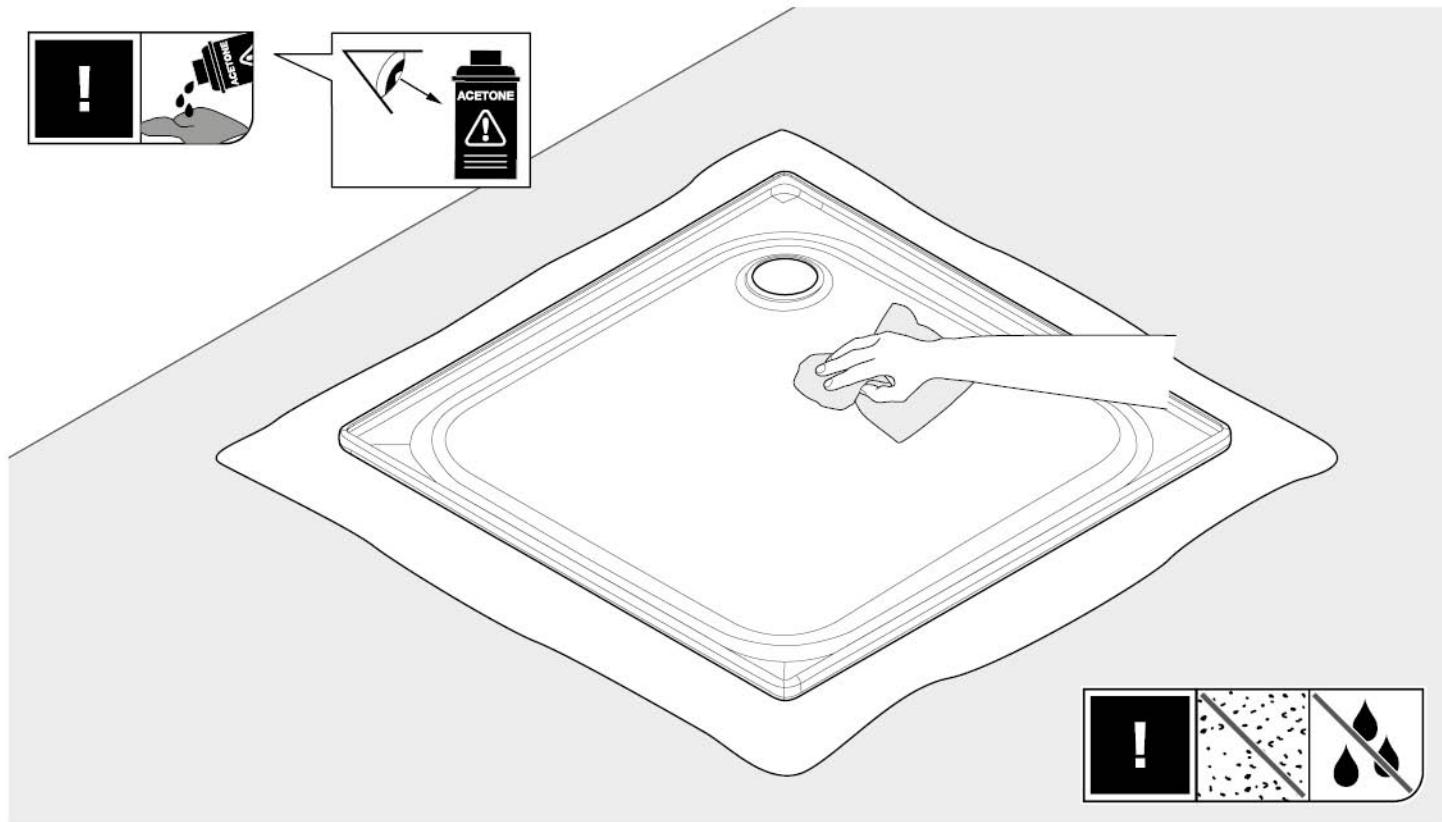


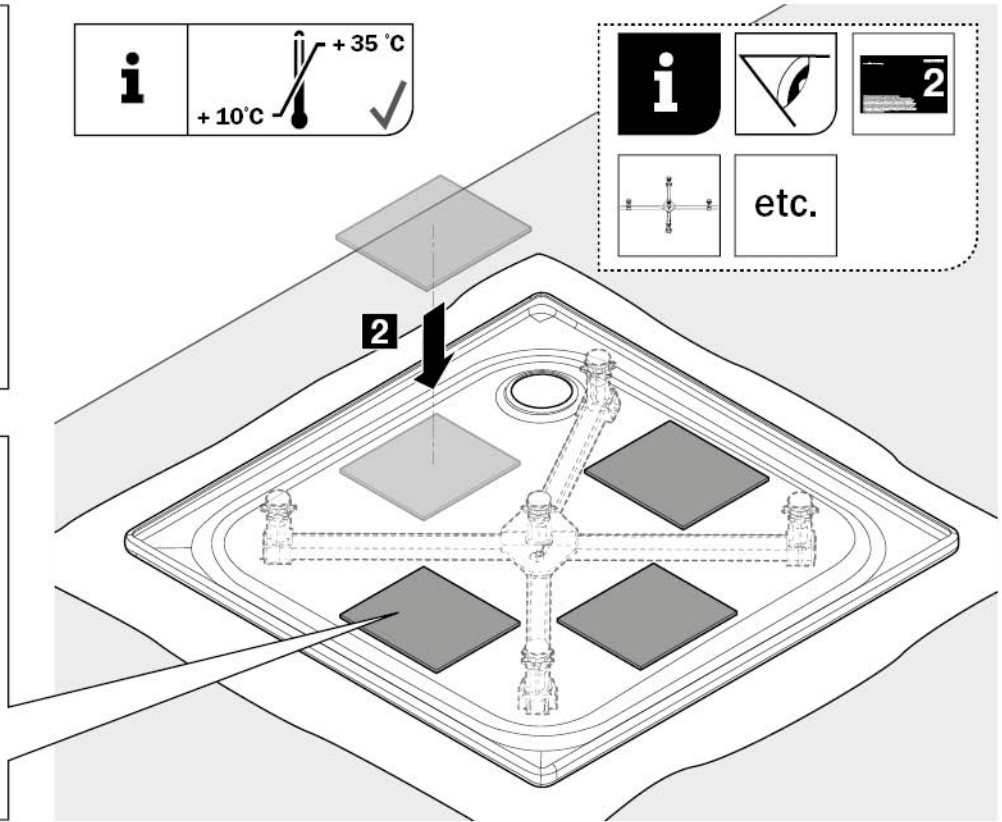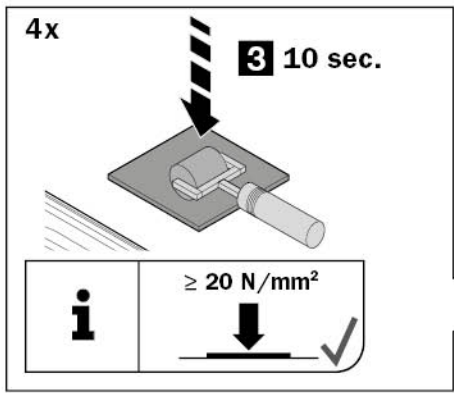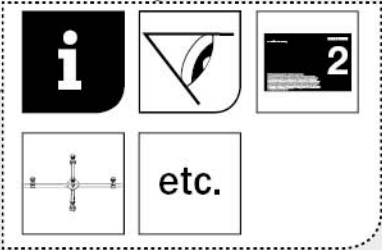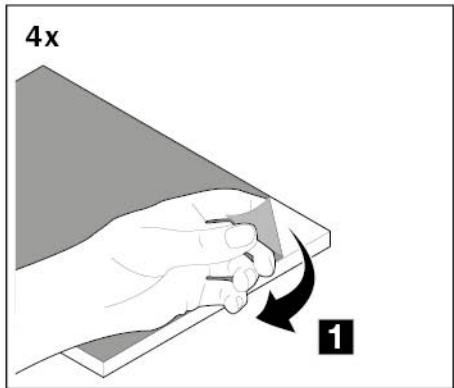

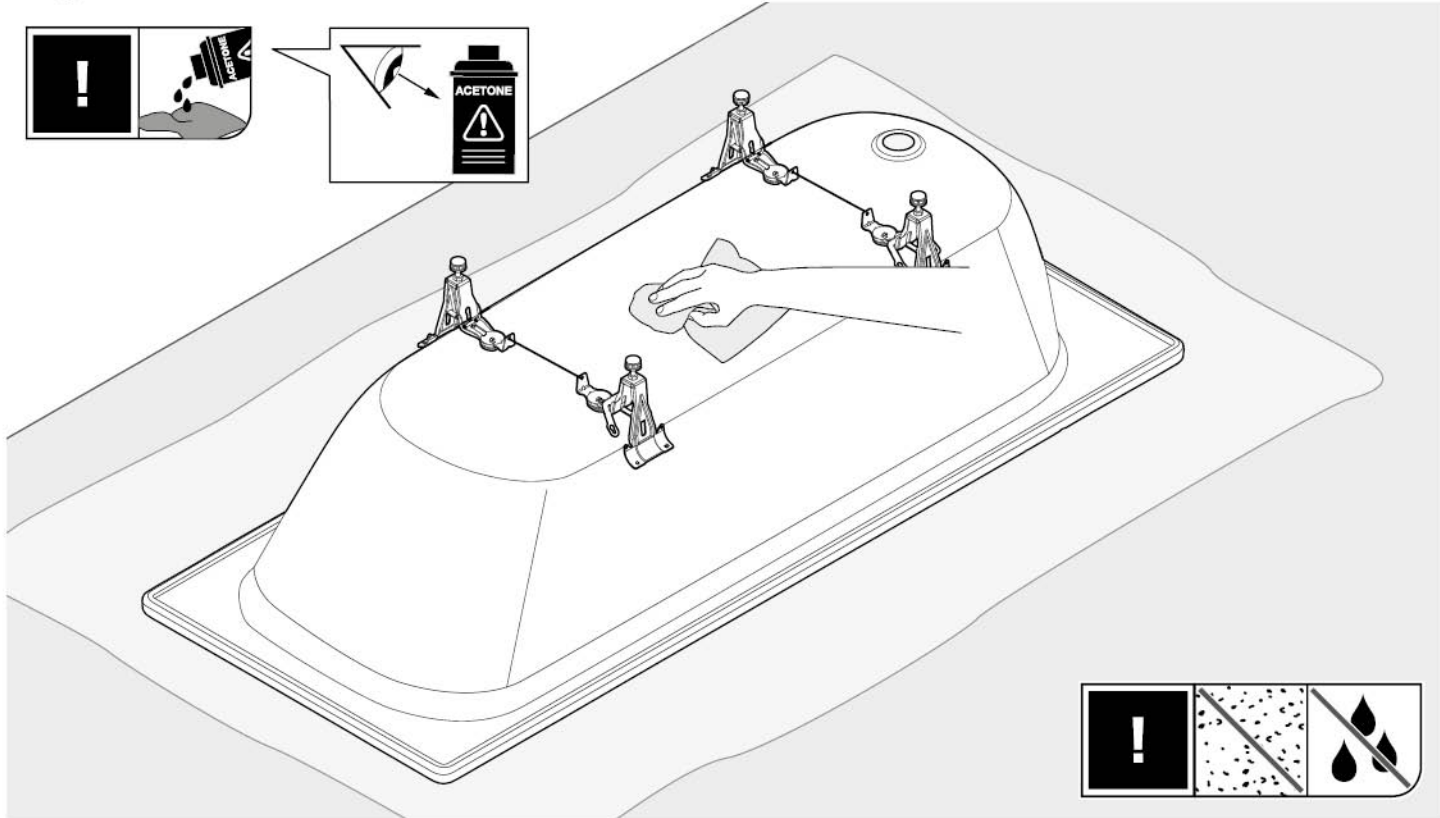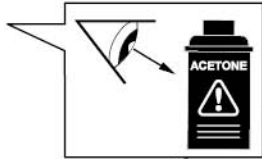


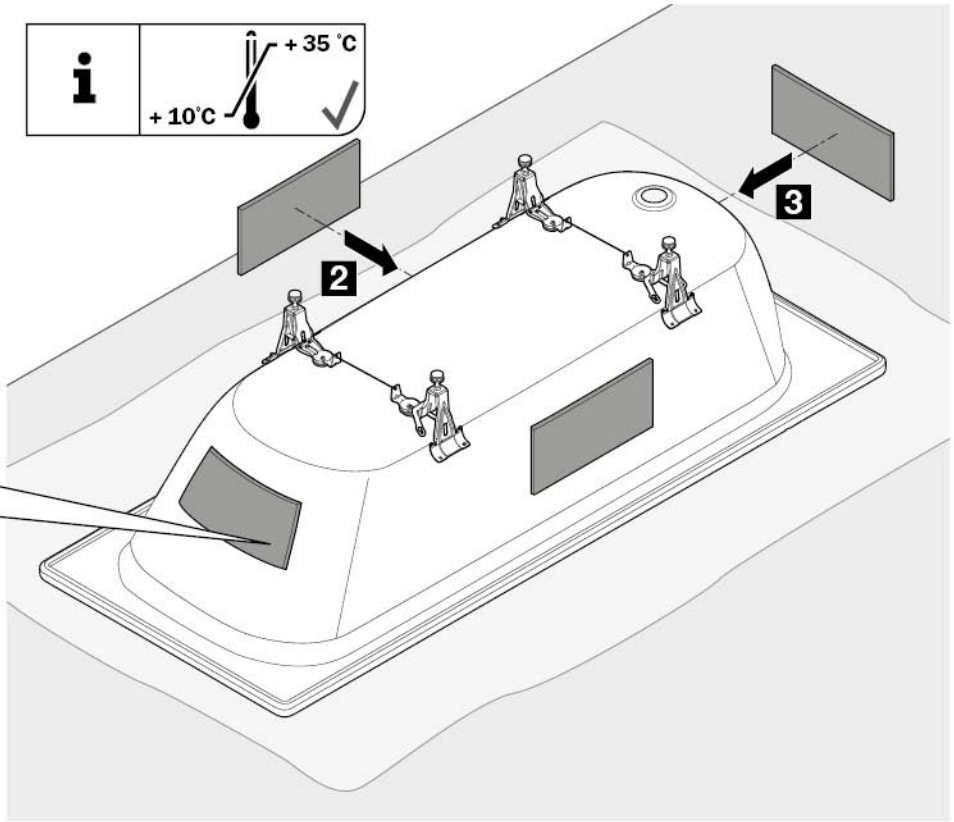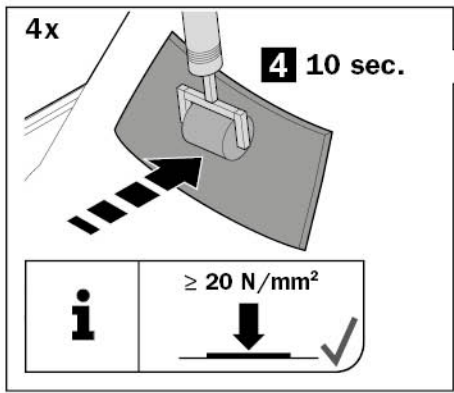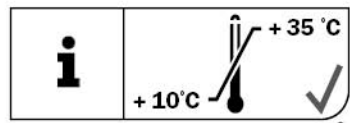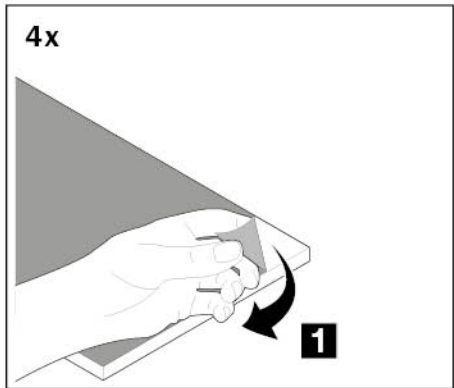

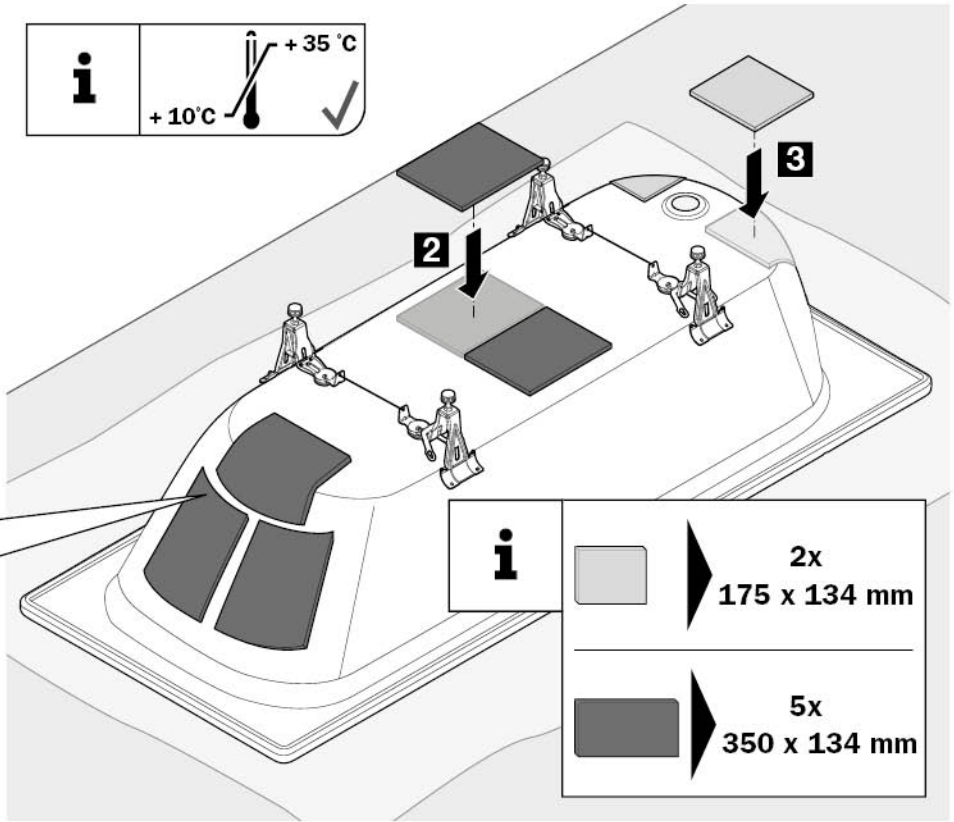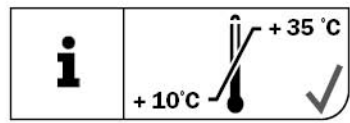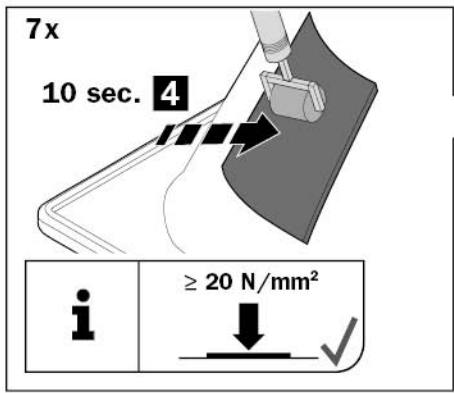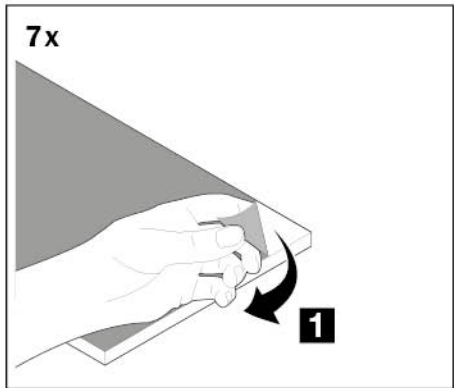

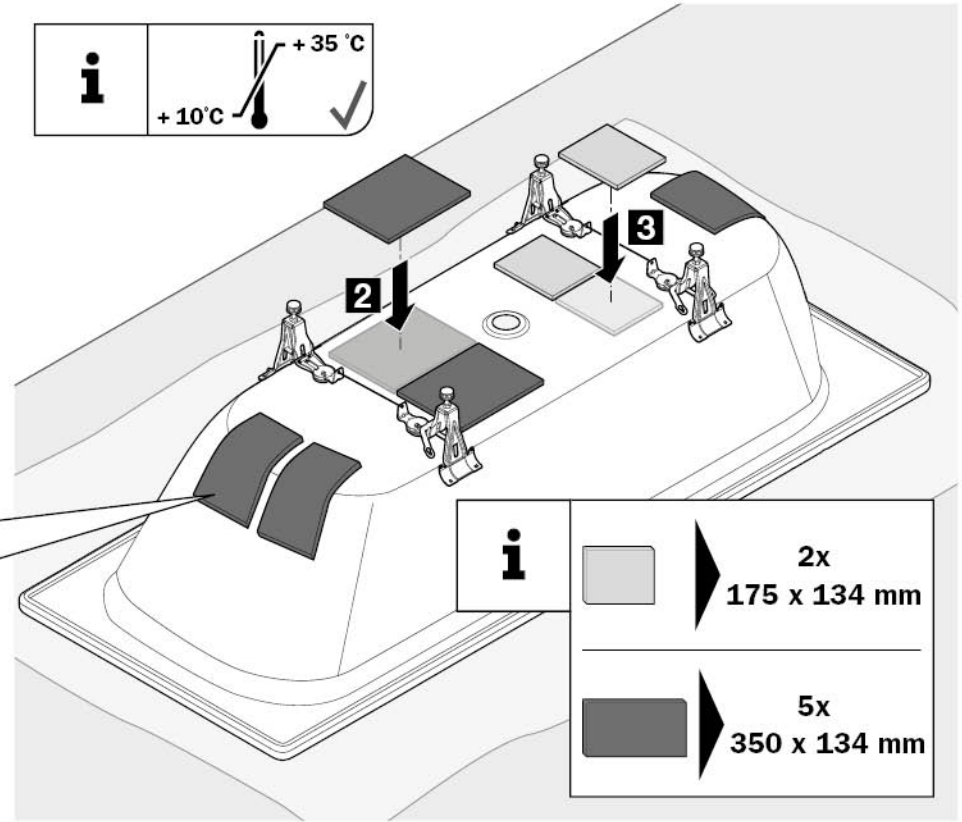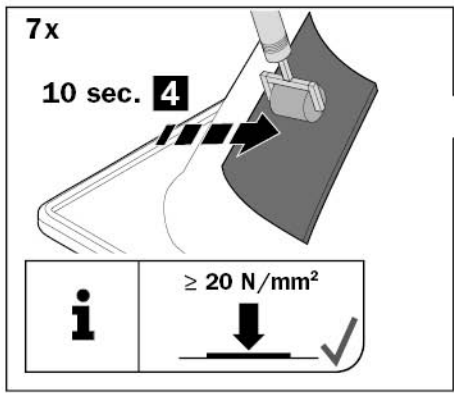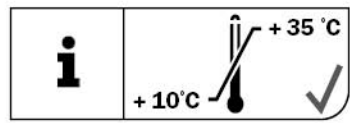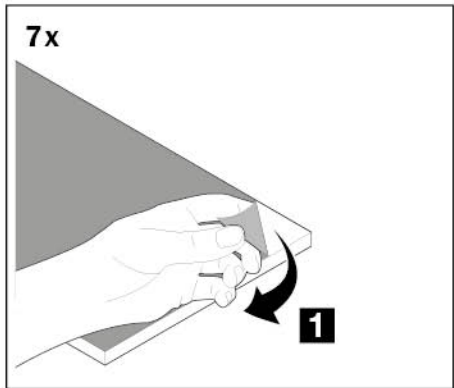


KALDEWEI

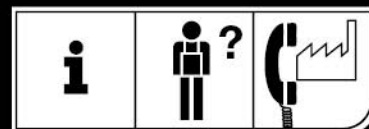

Franz Kaldewei GmbH & Co. KG

Beckumer Str. 33-35

D-59229 Ahlen

 +49 2382 785 0

 +49 2382 785 200

www.kaldewei.com

